

ECU® Trouble Shoot Guide for DAO1 Modules

Refer to the DAO1 application drawing and manual when using this guide.

Topics

[General things to check](#)

General things to check

1. I don't think the diodes are working

Here is how to test the diodes ...

1. Get an ohmmeter
2. Put RED lead on diode anode
3. Put BLACK lead on diode cathode
4. You should get conduction, if not the diode is bad
5. Reverse the leads and you should get no conduction if you do the diode is shorted (bad)
6. Open diodes can be replaced externally by placing a 1N4003 in place of the internal diode.

2. I am still having trouble

Do not hesitate to call us at 317-849-8470